

# **Comfy Peapod for Kids**

A)


## Inflation Instructions for the Comfy Peapod

Follow these instructions for easy, quick setup of your Peapod. For best results, first lay your Peapod flat on a clean surface, and connect your air pump to a power outlet


#### 1. Inflating the base

(IMPORTANT: you must inflate the base first!)


- -Each stopper consists of 2 parts, the lower stopper and the upper stopper (fig A)
- -Insert lower air stopper into valve opening until snug (fig B)
- -Insert pump nozzle into stopper opening (fig C )
- -Turn on pump and fill until firm (do not over-inflate)
- -Turn off pump and insert final air stopper (fig D)

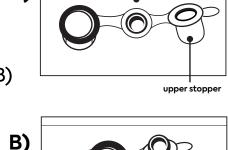

lower stopper

 




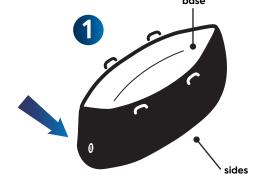



### 2. Inflating the sides

Once base is inflated, repeat steps above for each side. To deflate sides and base simply remove lower (and upper) air stopper

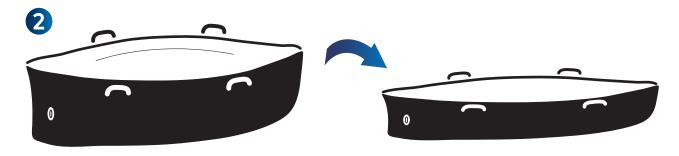



### **Comfy Peapod Care Instructions:**

To clean wipe the surface with a damp cloth or sponge using soapy water and air-dry. Do not use strong chemicals or submerge in water

A repair kit is provided with instructions Do not keep in extreme temperatures

#### **Important Information and Recommendations**

Made for one child only

Maximum weight 220 lbs (48"size), 350 lbs (60"size)

Not for children under 3 years old

Use with adult supervision – DO NOT USE IN WATER -not a flotation device

#### Do not use a needle pump to inflate

This inflatable Comfy Peapod has been tested by an independent and accredited third-party lab and meets or exceeds government safety standards for flammability, phthalates, lead, and physical and mechanical hazards

Bouncyband prides itself on our high-quality products and customer service. We warranty each Comfy Peapod against any manufacturing defects. This warranty is void if the product is punctured by a sharp object

To prevent accidental puncturing, do not jump in or on the Peapods and keep away from all sharp objects (e.g. pencils, pens, scissors etc.)